【設定ツールの起動】

 TCP300II の電源を入れて、StarMicronics のフォルダーに「TCP300II SettingCard」をダブル クリックで起動します。

TCP300II SettingCard

(2) "RS232C/USB Interface Card"がチェックされているのを確認し、OK をクリックします。

| TCP300II SettingCard issuing Ver1.30 | - | |
|--|---|----------------------|
| Interface Card | | Searching TCP300II |
| RS232C/USB Interface Card | A | Rank Setting |
| C Network Interface Card | • | Rank Reading |
| | Auto Off | |
| | No heat holding | Making Setting Card |
| OK | 3 min. heat holding | Reading Setting Card |
| Trunning cicaning | Printing start position | |
| 100 times C Londonno | mm | Reset |
| 300 times 100 times with buzzer 🔻 🗆 USB S/N | Printing Width Printing Width byte (mm) | End |
| Print Energy Offset Erase Energy Offset | | |

(3) 接続されている TCP300II の設定内容を読込み、画面に表示します。

媒体設定を変更する為、"Card Material"をチェックします。

| TCP300II SettingCard is | suing Ver1.30 | | | |
|--|------------------------------|-------------------------|-----|----------------------|
| Card Title SettingCard Le | vel1 for TCP3II v5.10.00 | | | |
| Card Material | | | | |
| 18 Mitsubishi TRCGAACS | (Blue LeucoV3) 30mm/s | | * | Rank Setting |
| 19 Mitsubishi TRCGAACS+ (Blue LeucoV3+) 30mm/s | | | | |
| 21 Mitsubishi TRCGBBBS/ | TRCGB3BS (Black LeucoV4) |) 30mm/s | Ŧ | Rank Reading |
| Character Code | Warning taking out | Auto Off | | |
| Japanese (JIS) 🔺 | No warning | No heat holding | | Making Setting Card |
| GB2312 | Buzzer | 1 min. heat holding | - | |
| Korean 🔻 | Buzzer & LED | o min. neutriording | | Reading Setting Card |
| Warning cleaning | Printing Direction | Printing start position | n | |
| 100 times 🔺 | Portrait | 14 mm | | Reset |
| 200 times | C Landscape | Printing Width | | |
| 100 times with buzzer | USB S/N | 60 byte (58.0 m | m) | End |
| Print Energy Offset | , | | | |
| 0 - | | | | |
| Erase Energy Offset | | | | |
| 0 🔻 | | | | |
| , | | | _ | |

Box の右側のカーソルを動かし、現在お客様の方で使用されているカード媒体を設定します。 【黒ロイコの設定例:媒体 42 番を設定】

- ・媒体番号 48 番 : RICOH 631FB (高速黒ロイコ: 60mm/s)
- ・媒体番号 42 番 : 三菱 TRCGB3BS(高速黒ロイコ: 60mm/s)
- ・媒体番号 33 番 : RICOH 431FB (黒ロイコ: 30mm/s)
- ・媒体番号 21 番 : 三菱 TRCGBBBS(黒ロイコ: 30mm/s)

(4) 設定変更したら、画面右中央の"Making Setting Card"ボタンをクリックします。

| TCP300II SettingCar | d issuing Ver1.30 | | |
|--|---|-------------------------|----------------------|
| Card Title SettingCard | Level1 for TCP3II v4.40.00 | | |
| 39 Mitsubishi TRCGB3BS (Black Leuco Hispeed) 45mm/s 40 Mitsubishi TRCGB3BS+ (Black Leuco Hispeed+) 45mm/s | | | Rank Setting |
| 41 Mitsubishi TRCGB38 | BS- (Black Leuco Hispeed-) 45i BS- (Black Leuco Hispeed) 60m | nm/s | Rank Reading |
| Character Code | Warning taking out | Auto Off | . |
| Japanese (JIS) GB2312 | No waming Buzzer | No heat holding | Making Setting Card |
| BIG5 Korean | LED Buzzer & LED | 3 min heat holding | Reading Setting Card |
| Warning cleaning Printing Direction | | Printing start position | |
| 100 times 200 times | O Portrait C Landscape | 14 mm | Reset |
| 300 times 100 times with buzzer | - T USB S/N | Printing Width | End |
| Print Energy Offset | T | | |
| Erase Energy Offset | | | |

(5) TCP300II が初期化動作を行った後、カードを挿入すると設定カードが作成されます。

